


# CCTC-001 Operation Instruction



## Panel instruction

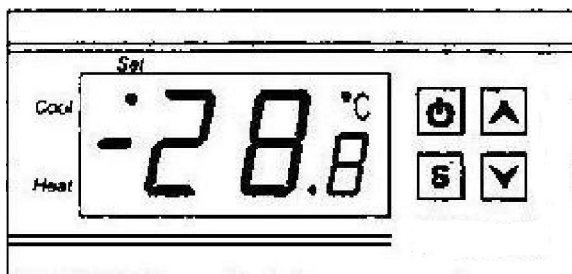

Display instruction: Three-digit LED+ Minus digit+ Status indicator light(Status indicator light (Cool, Heat)+ Set indicator light (Set)

Key instruction: “S” key: the key to set; “U”key: Up key;

“D”key: Down key; “P”: the key to turn on and off the power

## Indicator light status instruction

Indicator light	Function	Note
Cool indicator light	On: Refrigeration starts; Off: Refrigeration stops; Flash: compressor delay	Cool、 Heat indicator light cannot be “on” status simultaneously
Heat indicator light	On: heating starts; heating stops	
Set indicator light	On: parameter setting status	

## Menu instruction

Code	Function	Set range	Default	Note
F1	Temperature set value	-50 ~99.9	10.0	
F2	Difference set value	0.3~10.0	0.5	
F3	Compressor delay time	1~10 minutes	3minutes	
F4	Temperature calibration value	10.0 ~10.0	0	

## Safety regulations

- Danger :

1. Strictly distinguish the sensor down-lead, power wire and output relay interface from one another, and prohibit wrong connections or overloading the relay.
2. Dangers: Prohibit connecting the wire terminals without electricity cut-off.

- Warning

Prohibit using the machine under the environment of over temp., high temp, strong electromagnetism interference or strong corrosion.

- Notice :

1. The power supply should conform to the voltage value indicated in the instruction.
2. To avoid the interference, the sensor down-lead and power wire should be kept a proper distance.

## Wire diagram

